BEFORE START-UP after outside inspection

- 1. Chk documents, note "tacho"
- 2. First aid kit, Fire Ext., Lifevests ... chkd
- 3. Bagage and tow bar ... stowed
- 4. Rudder pedals ... adjust / check
- 5. Rear door ... Closed, Latched & unlocked
- 6. Front canopy ... Closed position 1 or 2
- 7. Seat belts ... Fastened

Flow checks:

- 8. Hobbs ... chk vs logbook
- 9. Trim ... set neutral
- 10. Emg. Fuel Valve ... Normal (Do NOT move!)
- 11. Power Level ... Idle
- 12. Parking Brake ... Set
- 13. Altn Air (Engine) ... OFF
- 14. Altn Static Air ... right / OFF
- 15. Circuit breakers ... chk
- 16. All 8 rocker switches ... OFF
- 17. Engine Master ... OFF
- 18. ECU SWAP ... AUTO
- 19. Internal lights ... OFF x 2.

START ENGINE

- 1. Electric Master ... Key ON
- 2. Fuel temps & quantities... chk
- 3. Annunciator panel ... chk & reset
- 4. Strobe Light ... ON
- 5. Position Lights ... as rqrd
- 6. Engine Master ... ON (wait for GLOW off)
- 7. PROP CLEAR ... START & hold till 500 rpm
- 8. RPM ... 890 +/÷ 20 Idle for 2 minutes if cold
- 9. Oil Pressure ... out of red in 3 secs
- 10. Avionics Master ... ON
- 11. QNH ... Set x 2 (ATIS)
- 12. Suction ... 5 "
- 13. DI heading ... set

TAXI max 1400 rpm until green temps

- 14. Brakes ... chk
- 15. Turning checks: instruments
- 16. Heading = Track = Compass ... chk.

RUN-UP *roll/dist = 330/640m*

- 1. Electric Master ... Check Key ON
- 2. Lights ... as rqrd (ext., int. & instr.)
- 3. Rear + Front door ... clsd & No Warning
- 4. Flight controls ... check
- 5. Trim ... chk & set
- 6. Flaps ... chk & set Take-Off position
- 7. ECU Swap ... ECU B; then back to AUTO
- 8. ECU TEST ... hold & complete (idle)
- 9. Transfer Pump ... chk; OFF
- 10. Squawk, Nav, AP, bugs ... set
- 11. Oil & Coolant temps ... chkd in green
- 12. Full PWR checks: %PWR RPM Eng instr.
- 13. Departure briefing.

LINE-UP Vr = 59 KIAS Vy = 66 K

- 1. Landing light ... ON
- 2. Pitot heat ... ON if required
- 3. Runway Heading ... Chk.

CLIMB

- 1. Landing Light OFF ... as req
- 2. Transponder ... chk mode ALT
- 3. Flaps ... UP (then Vy = 73 KT)
- 4. Altimeters ... QNH or 1013.

CRUISE

- 1. Altimeters ... chk
- 2. Power lever ... max 70%
- Transfer pump ... as rqrd then OFF.
 Max 9 gals fuel imbalance left/right

DESCENT / LANDING

roll/dist 290/740m

500fpm: 70%-140K-5NM/1T'; 30%-100K-3NM/1T'

- 1. Fuel transfer ... on as rgrd
- 2. Seat belts ... fastened
- 3. ATIS / arrival WX ... chk
- 4. Altimeters ... set QNH x 2
- 5. Approach briefing
- 6. Landing Lights ... ON
- 7. Transfer Pump ... chk Off
- 8. Brakes ... pressure chk & OFF.

Vref 71KIAS DO NOT OVERSPEED FLAPS!

AFTER LANDING

- 1. Pitot Heat ... Off
- 2. Ext Lights ... As Req
- 3. Flaps ... UP.

PARKING

- Parking Brake ... Set As Req
- 5. Throttle ... IDLE
- 6. Engine cooling timing ... start 2 min
- 7. Avionics Master ... OFF
- 8. Switches ... OFF except Strobe
- 9. Engine Master ... OFF after 2 minutes
- 10. Strobes ... OFF
- 11. Electric Master ... Key OFF
- 12. Interior PIC Light ... OFF
- 13. Parking Brake ... Released As Required
- 14. Controls ... Strapped As Required
- 15. Fuel caps... locked if unsecured parking